


4-20 mA to 0-10 V converter, push-button setup

Article number PR100s06

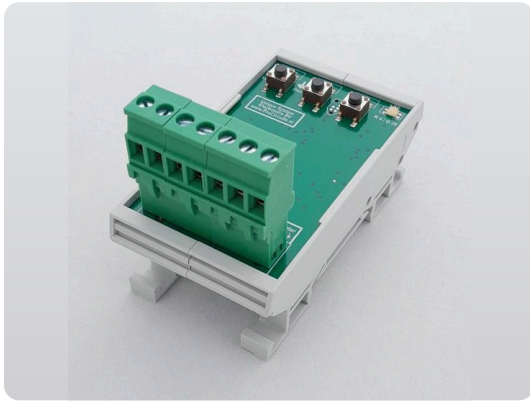

The PR100s06 converts a 4-20 mA current loop into a 0-10 V DC voltage signal. The output is calibrated with the push buttons: input at 20 mA, press the button for 10 V; input at 4 mA, press the button for 0 V. Fine adjustment by hand remains possible afterwards. The output is not galvanically isolated: the output minus is internally connected to the supply minus.


Price on request. Lead time on request. Not in stock? We will make it.

Specifications

Supply	12 and 24 V DC, operating range 11 to 30 V DC
Input	4-20 mA current loop
Output	0-10 V DC
Isolation	Not isolated: the output minus (terminal 4) is internally connected to the supply minus (terminal 2)
Setup	Three push buttons and a green LED
Ambient temperature	0 to 55 °C
Dimensions	Board 43 x 72 mm
Mounting	DIN rail holder, supplied as standard

Connections

Terminal 1	Supply plus, 12 or 24 V DC
Terminal 2	Supply minus, also common ground for the analogue signals
Terminal 3	0-10 V output plus
Terminal 4	0-10 V output minus, internally connected to terminal 2
Terminal 5	Not used
Terminal 6	4-20 mA input plus
Terminal 7	4-20 mA input minus

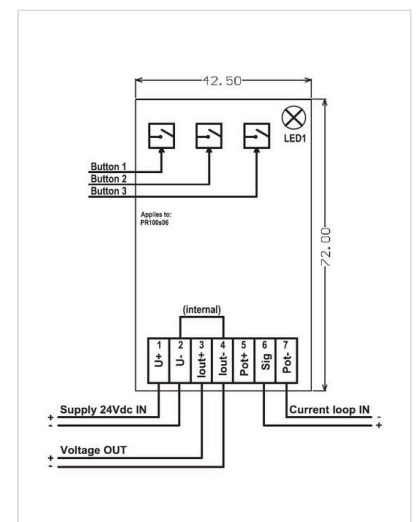

Setup

1. Set up the module when it is first connected and every time you use a different 4-20 mA input.
2. Connect the current loop to terminals 6 (plus) and 7 (minus), and the output to terminals 3 and 4.
3. Apply 12 or 24 V DC to terminals 1 and 2. The green LED lights continuously.
4. Hold button 3 for four seconds. The LED flashes green: the module is in programming mode.
5. Set the current source to 20 mA, the maximum, for an output of 10 V. Hold button 2 for four seconds. The LED flashes quickly for two seconds.
6. Set the current source to 4 mA, the minimum, for an output of 0 V. Hold button 1 for four seconds. The LED flashes quickly for two seconds.
7. Hold button 3 again for four seconds to save. The LED flashes quickly for two seconds and then lights green continuously. The module is ready for use.
8. To restore the factory settings: disconnect the supply, hold button 2 and reconnect the supply. If the green LED flashes briefly and quickly, the module has been reset.

More information, price and lead time: www.procircuits.nl/en/products/pr100s06

ProCircuits B.V. · Van Nijenrodeweg 903, 1081 BJ Amsterdam, Netherlands · +31 6 45 77 55 93 · willem@procircuits.nl ·

Chamber of Commerce (KVK) 87009870

We supply businesses only.